

aranet4

# Anti-Theft Wall mount

USER



GUIDE



1

Components: screw, screwdriver, wall mount, wall plug



# 2

Put the wall mount in the mounting hole on the backside of the Aranet4 sensor



3

Push the wall mount upwards  
in a locked position



4

Put the screw into the wall mount



5

Drill a hole in the wall in the desired location. Drill diameter: 6mm



6

Push wall plug into the hole



# 7

Screw Aranet4 to the wall. Use a screwdriver with a security Torx T15 bit.





8



# 9

Aranet4 is mounted to the wall and ready to measure indoor air quality!

